




## Two-Post Trailer Stand Operation Manual

### Important notes:

- Only trained and authorized individuals should use this product.
- Use only original IRONguard™ parts to service this product.
- This product works best on solid surfaces.


### Before you begin:

- Complete a visual inspection of the Two-Post Trailer Stand for any obvious maintenance issues.
- Be careful moving around the loading dock area to ensure it is safe to move around the area.
- Use appropriate personal protective equipment such as gloves, safety glasses, safety vest, hearing protection and protective shoes.

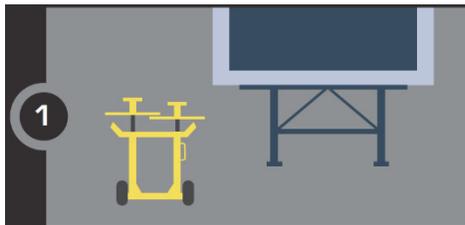

#### Step 1:


Wheel the Two-Post Trailer Stand near one corner at the nose of the spotted trailer.

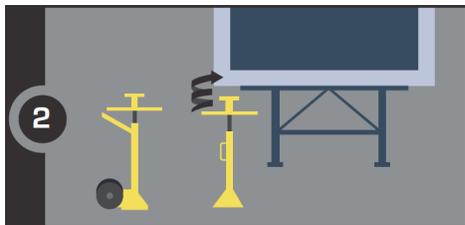

#### Step 2:

Lift the removable post out of the frame and position it under one corner of the trailer. It should be placed approximately 6" (152 mm) in from both sides of the trailer edge.


Using the bar handles underneath the top pad, turn the top pad counter clockwise until the top pad snugs up against the underside of the trailer.

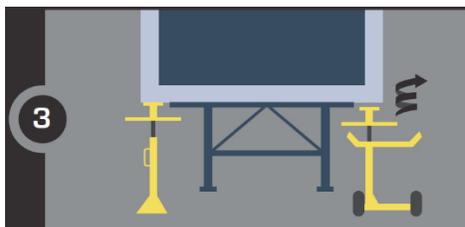

#### Step 3:

Wheel the remaining integral post to the other corner of the trailer and position it approximately 6" (152 mm) in from both sides of the trailer edge.

Using the bar handles underneath the top pad, turn the top pad counter clockwise until the top pad snugs up against the underside of the trailer.

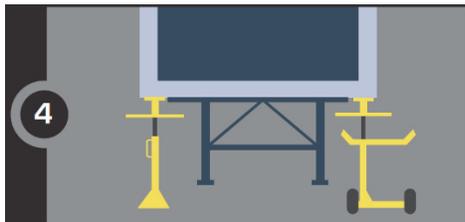

#### Step 4:

Before indicating to loading dock personnel of the safe condition, double-check to ensure both posts are snugged up and perpendicular to the underside of the trailer.



#### Critical safety tip:

If the Two-Post Trailer Stand does not have enough range to reach the underside of the trailer, use other means to protect against landing gear collapse and trailer tip over.

## Removing the Two-Post Trailer Stand

---

Complete all of the previous steps in reverse order.



**Critical safety tip:**

If you are unable to wind down the top pad on one or both posts, there may be an unsafe condition the Two-Post Trailer Stand has prevented. **Removing it at this point may cause a larger accident.** Contact the loading dock supervisor for assistance as the trailer may need to be supported by other means before the Two-Post Trailer Stand can be safely removed.

Once removed, store the unit out of the way of dock traffic and complete a visual inspection to ensure there are no obvious maintenance issues.

### Warranty Statement

---

*Ideal Warehouse Innovations, Inc. warrants for a period of three hundred and sixty-five (365) days from date of installation, or three hundred and seventy-five (375) days from date of shipment, whichever shall occur first, that all products and service parts shall be free from defects in workmanship and material. If the equipment or any part thereof, is returned, transportation charges pre-paid, within the periods specified above, and if examination by Ideal Warehouse Innovations, Inc. discloses to its satisfaction that the said equipment or part thereof has been defective in workmanship or material, it will deliver to the purchaser, without charge, parts of the first class workmanship and material in exchange for any parts so found to be defective, and Ideal Warehouse Innovations, Inc. is limited to said exchange.*


*This warranty shall not apply: (1) to maintenance service or adjustment; and (2) to any equipment which shall have been repaired or altered outside of Ideal Warehouse Innovations, Inc. or its authorized service representatives.*

*These warranties are in lieu of all other warranties, expressed or implied, including, without limitation, warranties of merchantability and fitness for purpose, all other representations to the first user purchaser, and all other obligations or liabilities, including liability or incidental and consequential damages, on the part of Ideal Warehouse Innovations, Inc. No person is authorized to give any other warranties or to assume any other liability on behalf of Ideal Warehouse Innovations, Inc. unless made or assumed in writing by Ideal Warehouse Innovations, Inc.*

### Recommended Safety Inspection and Maintenance Schedule

Inspect for	Action
<b>After each use:</b>	
Physical damage with a visual inspection.	Remove trailer stand from service and consult with manufacturer's representative for proper course of action.
<b>Every 90 days:</b>	
Lubricate threads.	Apply a good quality waterproof grease, based on the average local climate, to post threads. Ensure smooth operation.
Check post thread.	Test that the post thread operates smoothly through full adjustment range, ensuring it does not come out of the socket in the base.
Top pad security.	Ensure top pad of each post moves freely and does not come off.

**Two-Post Trailer Stand Parts Listing**

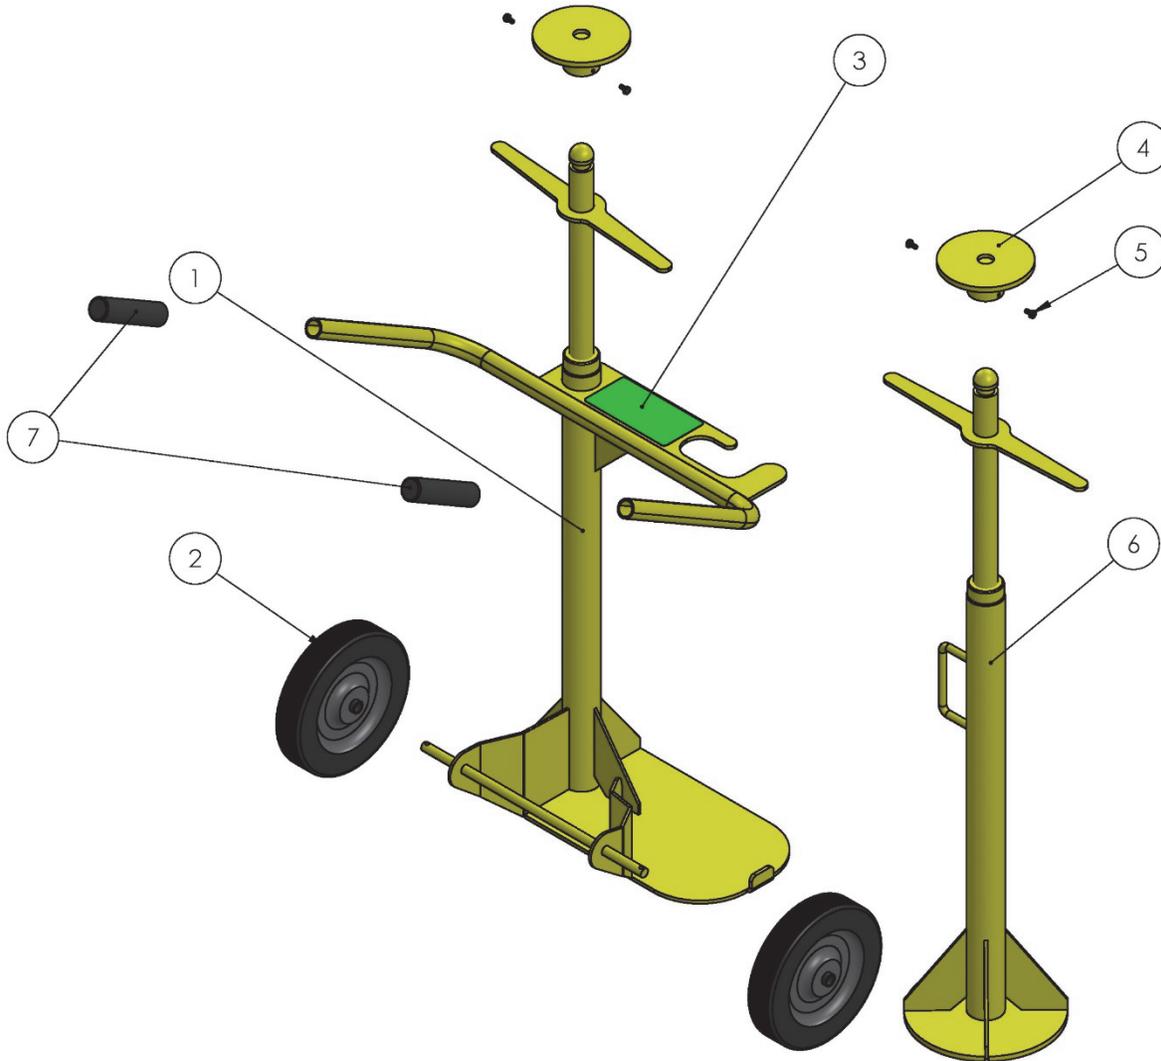

Key	Part #	Description	Quantity Per Stand
	60-5454	Complete Two-Post Trailer Stand	1
1	50-8521	Replacement Two-Post Main Frame	1
2	50-9251	10" Wheel with Cotter Pin and Axle Washer	2
3	50-8520	Two-Post Operation Label	1
4	50-8522	Replacement Two-Post Top Pad	2
5	50-8524	1/4 -20 x 1/2" Hex Head Bolt	4
6	50-8523	Replacement Two-Post Removable Post (incl. top cap and bolts)	1
7	50-8546	1-1/4" Handlebar Grips	2